

Calibration Chart for use with Models AV, AH, AK, AR, AD  
and Fan Terminal Models AS and AC.

### CALIBRATION CHART

